

e·quinux



VPN Configuration Guide

NETGEAR® FVS114

equinix AG and equinix USA, Inc.

© 2009 equinix USA, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of equinix AG or equinix USA, Inc. Your rights to the software are governed by the accompanying software license agreement.

The equinix logo is a trademark of equinix AG and equinix USA, Inc., registered in the U.S. and other countries.

Every effort has been made to ensure that the information in this manual is accurate. equinix is not responsible for printing or clerical errors.

www.equinix.com

Apple, the Apple logo, iBook, Mac, Mac OS, MacBook, PowerBook are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

NETGEAR is a registered trademark of NETGEAR Inc.

equinix shall have absolutely no liability for any direct or indirect, special or other consequential damages in connection with the use of the quick setup guide or any change to the router generally, including without limitation, any lost profits, business, or data, even if equinix has been advised of the possibility of such damages.

Introduction	5
Important Prerequisites.....	6
Scenario	7
Terminology.....	8
My NETGEAR Configuration	9
Task 1 – Configure your NETGEAR	10
Step 1 – Create a new VPN Tunnel using the VPN Wizard	10
Step 2 – Adjust the VPN Tunnel Settings.....	12
Step 3 – Retrieve your NETGEAR's LAN and WAN Configuration ..	14
Task 2 – Configure VPN Tracker	15
Step 1 - Create a New Connection	15
Step 2 – Configure the VPN Connection	16
Task 3 – Test the VPN Connection	17
It's time to go out!.....	17
Start your connection	17
Supporting Multiple Users	19
Preventing IP Address Conflicts.....	19
Configuring VPN Tracker for Multiple Users	20
Deploying VPN Connections to Your Users.....	21
Troubleshooting	22
VPN Connection Fails to Establish.....	22
No Access to the Remote Network.....	23
VPN Settings Explained	25
IKE Policy.....	25
VPN Policy	27

The Role of the Local Address in VPN Tracker	30
Outgoing Network Ports	32

Introduction

This document describes how VPN Tracker can be used to establish a connection between a Mac running Mac OS X and a NETGEAR VPN gateway.

Note This documentation is only a supplement to, not a replacement for, the instructions included with your NETGEAR device. Please be sure to read those instructions and understand them before starting.

NETGEAR Configuration

The first part of this document will show you how to configure a VPN tunnel on a NETGEAR VPN router using a basic VPN setup that can accept incoming connections from any IP address.

VPN Tracker Configuration

In the second part, this document will show you how to configure VPN Tracker to easily connect to your newly created VPN tunnel.

Troubleshooting and Advanced Topics

Troubleshooting and advanced topics are covered in the third part of this document. There you will find:

- ▶ instructions for setting up a VPN connection for multiple users
- ▶ troubleshooting tips
- ▶ an in-depth discussion of the various NETGEAR settings and how they relate to VPN Tracker

Tip If you are setting up VPN on your device for the first time, we strongly recommend you start out with the tutorial-style setup in the first and second part of this document, and only add additional features to your connection once you have the basic setup working.

Important Prerequisites

Your NETGEAR Device

This document applies to the following NETGEAR devices

- ▶ FVS114


The documentation is based on firmware 1.1_15

Your Mac

- ▶ VPN Tracker runs on Mac OS X 10.4, 10.5 and 10.6
- ▶ The configuration described in this guide requires VPN Tracker 6. Make sure to use a recent VPN Tracker version. The latest VPN Tracker release can be obtained from <http://www.vpntracker.com>
- ▶ You will need one VPN Tracker license for each Mac running VPN Tracker

Scenario

In our example, we need to connect an employee's Mac to an office network. The following diagram illustrates this scenario:

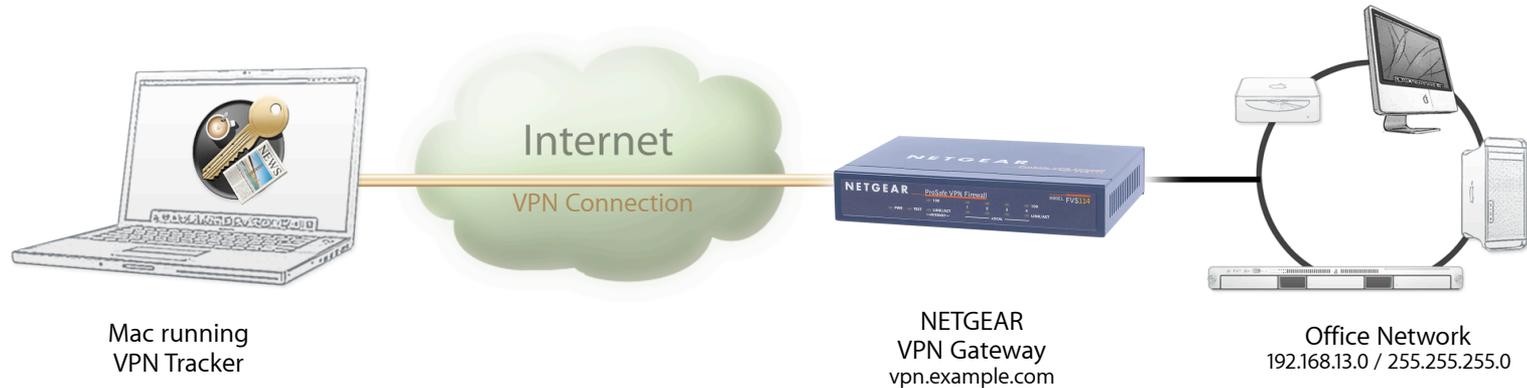

This guide assumes that the Mac running VPN Tracker already has internet connectivity. The office's NETGEAR firewall (the "VPN Gateway") is also already connected to the Internet and can be accessed through a static IP address or a (Dynamic) DNS host name. In our example setup, we will be using a DNS host name: `vpn.example.com`.

The NETGEAR device has a second network interface which is connected to the internal office network (LAN). In our example, the office network has the IP range `192.168.13.0/24` (which is the same as `192.168.13.0/255.255.255.0`). This is the network that will be accessed from the employee's Mac through the VPN. It is called the "Remote Network" in VPN Tracker.

Terminology

A VPN connection is often called a “tunnel” (or “VPN tunnel”). Every VPN tunnel is established between two “endpoints”. In our example one endpoint is VPN Tracker and the other endpoint is the VPN gateway.

Please note that for each endpoint, the settings on the other endpoint are considered to be “remote”, while its own settings are considered to be “local”. That means a “local” setting from VPN Tracker’s perspective, is a “remote” setting from the VPN gateway’s perspective, and vice versa.

The sample configuration described in this guide is called a “Host to Network” configuration: A single computer, called a “Host” establishes a VPN tunnel to an entire “Network” behind the VPN gateway.

My NETGEAR Configuration

Throughout this guide, there are certain pieces of information that are needed later on for configuring VPN Tracker. This information is marked with red numbers to make it easier to reference it later. You can print out this form to help keep track of the various configuration settings of your NETGEAR device.

① Pre-Shared Key: _____

② NETGEAR's Local Identifier: _____

③ NETGEAR's Remote Identifier: _____

④ WAN IP Address: _____ . _____ . _____ . _____ (or DNS host name _____)

⑤ LAN Network Address: _____ . _____ . _____ . _____

⑥ LAN Subnet Mask: _____ . _____ . _____ . _____

Task 1 – Configure your NETGEAR

This section describes how to set up your NETGEAR's VPN. If you do not yet have VPN configured and in use on your device, please proceed exactly as described in this section. We will be using the NETGEAR VPN Assistant to configure your NETGEAR device's VPN settings.

Step 1 – Create a new VPN Tunnel using the VPN Wizard

The screenshot shows the NETGEAR VPN Wizard interface. On the left, a navigation menu lists 'VPN Wizard', 'IKE Policies', 'VPN Policies', 'CAs', 'Certificates', 'CRL', 'VPN Status', 'Maintenance', 'Router Status', and 'Attached Devices'. The 'VPN Wizard' option is selected and circled in red. The main content area is titled 'VPN Wizard' and 'Step 1 of 3: Connection Name, Connection type and Pre-Shared Key'. It contains three input fields: 'What is the new Connection Name?' with the value 'vpntracker', 'What is the pre-shared key?' with the value 'topsecret', and 'This VPN tunnel will connect to.' with the radio button for 'A remote VPN client' selected and circled in red. At the bottom, there are three buttons: 'Back', 'Next', and 'Cancel'. The 'Next' button is circled in red.

- ▶ Go to **VPN > VPN Wizard**
- ▶ Click “Next”
- ▶ **Connection Name:** Enter a name for your connection (e.g. “vpntracker”)
- ▶ **Pre-shared key:**
The pre-shared key is the password that users have to enter before connecting. Make sure to set a strong password here
- ▶ Select the **“A remote VPN client”** checkbox option

The VPN Wizard will generate the appropriate settings and will then display a summary page. Be sure to make a note of the following settings

VPN Wizard

Summary

Please verify your inputs:

Connection Name:	vpntracker
Exchange Type:	Aggressive Mode
ID Type:	FQDN
Remote WAN ID:	fvs_remote ③
Remote VPN Endpoint:	0.0.0.0
Remote Client Access:	By Single
Remote IP:	0.0.0.0
Local WAN ID:	fvs_local ②
Local Client Access:	By Subnet ⑤
Local IP:	192.168.13.0/255.255.255.0 ⑥

You can click [here](#) to view the VPNC-recommended parameters.
Please click "Done" to apply the changes.

Back Done Cancel

▶ **Remote VPN Endpoint:**

This is the identifier used by your NETGEAR to identify your incoming connections. It may differ from what is pictured here, so be sure to write down the exact identifier ③

▶ **Local WAN ID:** This is the identifier with which your NETGEAR device can be identified by VPN Tracker. Be sure to write this down exactly ②

▶ **Local IP:**

▶ Write down the first part of the address (e.g. "192.168.13.0") as the **LAN Network Address** ⑤

▶ Write the second part of the address (e.g. "255.255.255.0") as your **LAN Subnet Address** ⑥

▶ Click "Done"

Step 2 – Adjust the VPN Tunnel Settings

The tunnel created by the VPN Wizard needs to be adjusted slightly to match VPN Tracker’s default settings:

IKE Policies

Policy Table

	#	Name	Mode	Local ID	Remote ID	Encr	Auth	DH
	1	office	Aggressive	fvs_local	fvs_remote	3DES	SHA1	Group 2 (1024 Bit)

► Go to **IKE Policies** and click **“Edit”**.

IKE SA Parameters

Encryption Algorithm: 3DES

Authentication Algorithm: SHA-1

Authentication Method:
 Pre-shared Key
.....
 RSA Signature (requires Certificate)

Diffie-Hellman (DH) Group: Group 2 (1024 Bit)

SA Life Time: 86400 (secs)

► **SA Life Time:** Set this value to “86400” (secs)

► Click **“Apply”**

VPN Policies

Policy Table

#	Enable	Name	Type	Local	Remote	AH	ESP
1	<input checked="" type="checkbox"/>	office	Auto	192.168.13.0/255.255.255.0	Any	Disabled	ESP

Edit **Move** **Delete**

► Go to **VPN Policies** and click **“Edit”**.

VPN - Auto Policy

General

Policy Name: office

IKE policy: office

IKE Keep Alive

Remote VPN Endpoint: Ping IP Address: 0 . 0 . 0 . 0

Address Type: IP Address

Address Data: 0.0.0.0

SA Life Time: 28800 (Seconds)

0 (Kbytes)

IPsec PFS

NetBIOS Enable

PFS Key Group: Group 2 (1024 Bit)

Traffic Selector

Local IP: Subnet address

Start IP address: 192 . 168 . 13 . 0

Finish IP address: 0 . 0 . 0 . 0

Subnet Mask: 255 . 255 . 255 . 0

Remote IP: Any

Start IP address: 0 . 0 . 0 . 0

Finish IP address: 0 . 0 . 0 . 0

Subnet Mask: 0 . 0 . 0 . 0

AH Configuration

Enable Authentication

Authentication Algorithm: MD5

ESP Configuration

Enable Encryption

Encryption Algorithm: 3DES

Enable Authentication

Authentication Algorithm: SHA-1

Back **Apply** **Cancel**

► **SA Life Time:** Set this value to **“28800”** (secs)

► **IPsec PFS**

Enable this option and select **“Group 2 (1024 Bit)”**

► Click **“Apply”**

Step 3 – Retrieve your NETGEAR's LAN and WAN Configuration

Router Status	
System Name	FVS114
Firmware Version	V1.1_15
WAN Port	
MAC Address	00:0f:b [redacted]
IP Address	194.145.236.110 4
DHCP	Fixed
IP Subnet Mask	255.255.255.192
Domain Name Server	194.145.236.1
LAN Port	
MAC Address	00:0f:t [redacted]
IP Address	192.168.13.110
DHCP	OFF
IP Subnet Mask	255.255.255.0

[Show Statistics](#) [WAN Status](#)

Go to **Maintenance > Router Status** and obtain the following information from the Router Status page:


▶ **WAN Port:**

- ▶ Write down the **WAN IP Address** **4**
- ▶ If you use Dynamic DNS for your device, or if it has a DNS host name, write down the host name instead

Task 2 – Configure VPN Tracker

This section describes how to configure VPN Tracker to connect to your NETGEAR. You will need the configuration information you collected during Task 1. If you are missing any information, please refer back to steps 3 to 5 of “Task 1 – Configure your NETGEAR”.

Step 1 - Create a New Connection

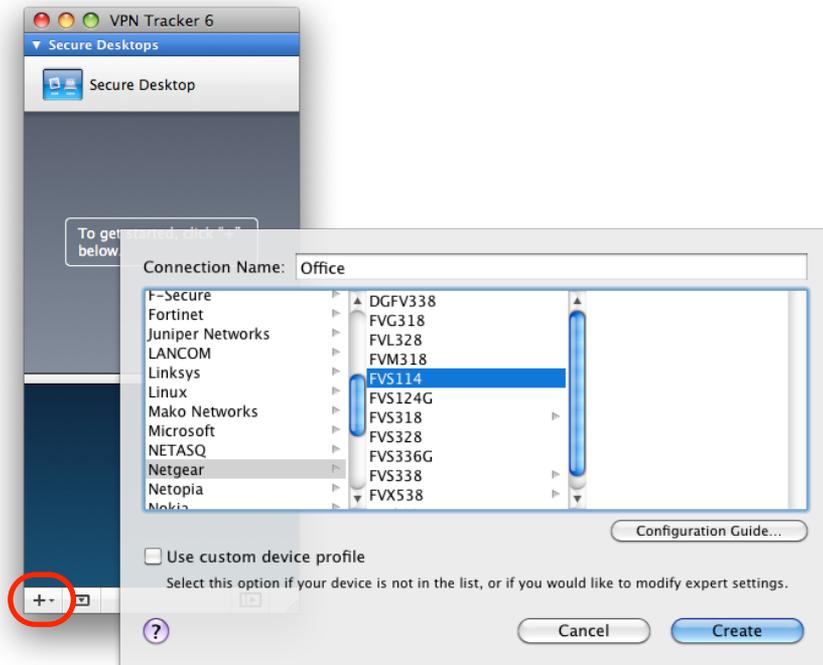

- ▶ Launch VPN Tracker
- ▶ Click the “+” button in the main window

You will be asked to select a device profile for the new connection:

- ▶ Select “**Netgear**” from the list
- ▶ Select your device from the list of NETGEAR devices
- ▶ If your device has more than one device or firmware revision available, be sure to select the revision/ firmware matching your device
- ▶ **Connection Name:** Choose a name for your connection (e.g. “Office”)
- ▶ Click “OK”

Step 2 – Configure the VPN Connection

The screenshot shows the 'Basic' tab of a Netgear VPN configuration page. At the top, there are tabs for 'Basic', 'Advanced', 'Actions', 'Export', and 'Log'. Below the tabs, there is a dashed box labeled 'Office'. The main configuration area is divided into several sections:

- Connection based on:** Netgear FVS114 and Configuration Guide.
- VPN Gateway:** vpn.example.com (marked with a red 4).
- Network Configuration:**
 - Topology: Host to Network
 - Local Address: IP Address
 - Remote Networks: 192.168.13.0 / 24 (marked with red 5 and 6).
- Authentication:** Pre-shared key (Stored in keychain).
- Identifiers:** A red circle highlights the 'Local' and 'Remote' dropdown menus, both set to 'Fully Qualified Domain Name (FQDN)'. The 'Local' dropdown is set to 'fvs_remote' (marked with red 3) and the 'Remote' dropdown is set to 'fvs_local' (marked with red 2).
- DNS:** Use Remote DNS Server (checkbox is unchecked).

- ▶ **VPN Gateway:** Enter your NETGEAR's public IP address **4**. If you are using Dynamic DNS, or if the device has a DNS host name, use it instead (in our example, we are using the host name "vpn.example.com")
- ▶ **Local Address:** Leave empty for now. Depending on your setup, you may have to set a specific Local Address eventually. Refer to "Supporting Multiple Users" for details and how to choose the address
- ▶ **Remote Networks:** Enter the network address **5** and the subnet mask **6** of the network that is being accessed through the VPN tunnel. Separate the subnet mask with a forward slash ("/")
- ▶ **Identifiers**
 - ▶ Make sure the types for both identifiers are set to "Fully Qualified Domain Name (FQDN)"
 - ▶ **Local:** Enter the **remote** identifier from your NETGEAR (e.g. "fvs_remote") **3**
 - ▶ **Remote:** Enter the **local** identifier from your NETGEAR (e.g. "fvs_local") **2**


Task 3 – Test the VPN Connection

This section explains how to start and test your VPN connection.

It's time to go out!

You will not be able to test and use your VPN connection from within the internal network that you want to connect to. To test your connection, you will need to connect from a different location. For example, if you are setting up a VPN connection to your office, test it from home. If you are setting up a VPN connection to your home network, test it from an Internet cafe, or go visit a friend.

Start your connection

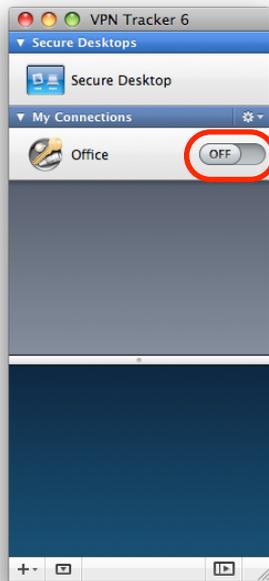


- ▶ Connect to the Internet
- ▶ Make sure that your Internet connection is working – open your Internet browser and try to connect to <http://www.equinux.com>
- ▶ Start VPN Tracker if it's not already running
- ▶ Slide the On/Off slider for the connection you have just configured to **On**

When you are prompted for your pre-shared key:



- ▶ **Pre-shared key:** Enter the pre-shared key that you configured on the NETGEAR device **1**
- ▶ Optionally, check the box “Store in Keychain” to save the password in your keychain so you are not asked for it again when connecting the next time
- ▶ Click “OK”

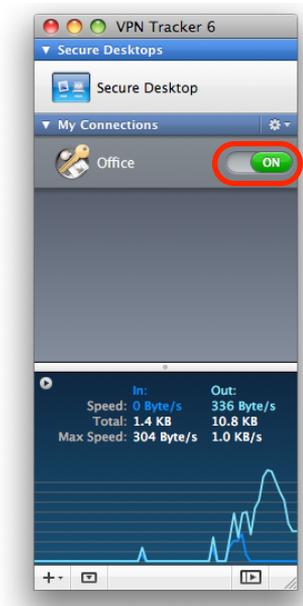

- ▶ If the slider goes back to **Off** after starting the connection, or after entering your pre-shared key or your XAUTH credentials, please read the **Troubleshooting** section of this document
- ▶ If the slider goes to **On** and turns green after a while, you have successfully established a connection

Congratulations!

Supporting Multiple Users

Once your VPN expands to multiple users (or even just yourself connecting from multiple computers simultaneously), there are certain issues you will have to consider. Primarily, you must ensure that IP addresses do not conflict. In addition to purely technical considerations, VPN Tracker makes it easy to distribute pre-configured connections to your users, and prevent the modification of VPN connections and access to confidential data.

Preventing IP Address Conflicts

If multiple users connect using the same policy on your NETGEAR at the same time, **you must ensure that each of them uses a different Local Address in VPN Tracker** by setting an individual Local Address for each of them.

Advanced Users A more detailed description of the Local Address setting is available in the last chapter of this document.

Choosing the Local Address

The Local Address must **not** be part of the remote network (i.e. the NETGEAR's LAN) and the **same Local Address may not be used by two VPN clients** at the same time.

Example: The NETGEAR's LAN in this example is the network 192.168.13.0/24 (= 192.168.13.0/255.255.255.0). Choose an arbitrary [private network](#) that is not part of this network, such as 10.22.13.0/24, and manually assign each user of the VPN a different IP address from that network to be used as the Local Address in VPN Tracker.

User	IP Address
alice	10.22.13.1
bob	10.22.13.2
charlie	10.22.13.3
...	10.22.13._

Tip If your VPN needs expand to more than a handful of users, you may want to consider upgrading to a VPN gateway that can automatically distribute IP addresses through Mode Config.

Configuring VPN Tracker for Multiple Users

The tunnel you have set up in the first part of this document can be used by multiple users if you set an individual Local Address for each of them, as described in “Choosing the Local Address”.

Once you have chosen local addresses for each user, you’ll need to make sure each user is using their IP address in VPN Tracker:


- ▶ Select VPN Tracker’s **Basic** tab
- ▶ Go to **Local Address**
- ▶ Enter the Local Address that you have chosen for this user
- ▶ Repeat this process for each user’s VPN connection

Network	Host to Network ▾
VPN Gateway	vpn.example.com
Local Address	10.22.13.1
Remote Networks	192.168.13.0 / 255.255.255.0

Deploying VPN Connections to Your Users

VPN Tracker Professional Edition offers a number of ways to easily distribute pre-configured connections to users. It is even possible to create a custom VPN Tracker application that contains a pre-configured connection and a license voucher for your users.

Further information on deploying connections to users is available in the VPN Tracker manual.

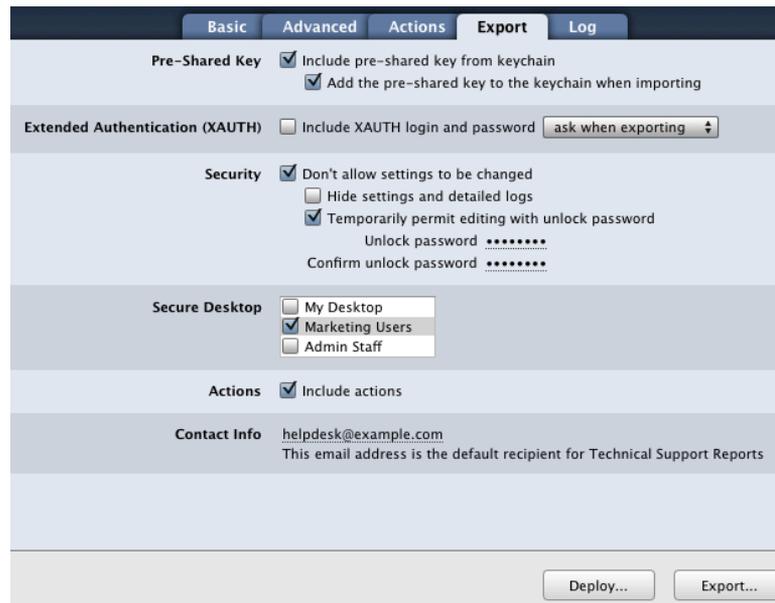

The screenshot shows the 'Export' tab of the VPN Tracker configuration interface. The tabs at the top are 'Basic', 'Advanced', 'Actions', 'Export', and 'Log'. The 'Export' tab is active and contains the following sections:

- Pre-Shared Key:** Include pre-shared key from keychain
 Add the pre-shared key to the keychain when importing
- Extended Authentication (XAUTH):** Include XAUTH login and password
- Security:** Don't allow settings to be changed
 Hide settings and detailed logs
 Temporarily permit editing with unlock password
Unlock password:
Confirm unlock password:
- Secure Desktop:** My Desktop
 Marketing Users
 Admin Staff
- Actions:** Include actions
- Contact Info:** helpdesk@example.com
This email address is the default recipient for Technical Support Reports

At the bottom right, there are two buttons: 'Deploy...' and 'Export...'.

Tip To deploy VPN Tracker to many users, you can create a custom VPN Tracker application with a pre-configured connection and a license voucher. Simply click "Deploy..." to get started.

Troubleshooting

In most cases, your connection should work fine if you followed the instructions above. If you cannot connect, please read on.

VPN Connection Fails to Establish


On/Off Slider goes back to “Off” right away

If the slider goes back to “Off” right away, please make sure you have entered all the required information. VPN Tracker will highlight fields that are missing information.

On/Off Slider goes back to “Off” after a while

If the connection ON/OFF slider goes back to “OFF” a while after attempting to start the connection, please go to the “Log” tab to get more information about the error. You can also click the warning triangle to be automatically taken to the “Log” tab.

Depending on the actual problem, VPN Tracker will display detailed suggestions for a solution.

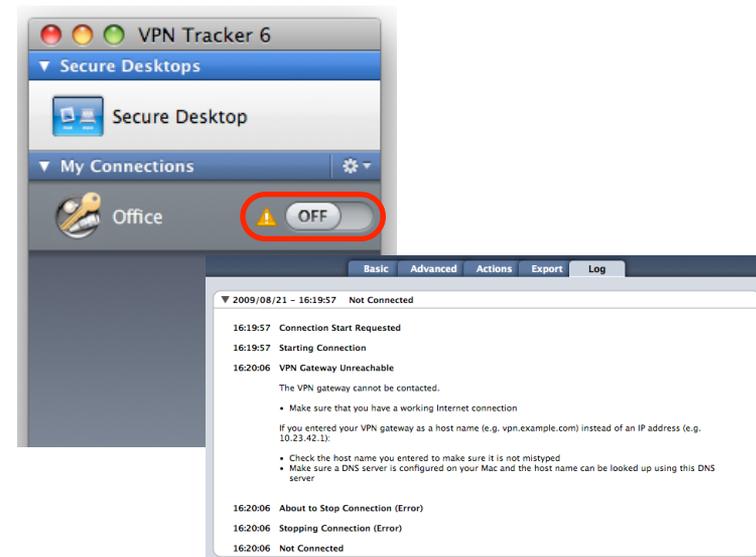

No Access to the Remote Network

If the connection slider goes to ON and turns green, but you cannot access resources (servers, email, etc.) in the VPN, please check the following points.

Connect to an IP address (instead of a host name)

If you are not connecting to the resource by IP address (e.g. 192.168.1.42), but are using a host name (e.g. server.example.com), please try using the resource's IP address instead. If the connection works when using the IP address, but not when using a host name, please make sure that your Mac's DNS server or the "Remote DNS" server that you have configured in VPN Tracker is able to resolve this host name to an IP address.

Test VPN Availability again

In many networks your Mac will be behind a router that performs Network Address Translation (NAT). For a VPN connection to be established through such a router, VPN Tracker can use different methods, but not all of them may be supported by your local router or your VPN gateway.

VPN Tracker automatically runs a test to detect the proper method for your particular Internet connection when you first connect using this Internet connection. However, test results could become outdated by changes to the local router, so it is a good idea to test again if there are problems.

- ▶ Select "Tools > Test VPN Availability" from the menu
- ▶ Click "Test Again" and wait until the test has completed
- ▶ Try connecting again

Check that the IP address you are connecting to is part of the VPN's remote network

Check that the IP address you are connecting to is actually part of the remote network(s). Also double-check the network mask that you have configured for the remote network(s) in VPN Tracker.

Further Questions?

You can find the latest news and compatibility information on our support and FAQ website:

<http://www.equinux.com/support>

If you need to contact equinux Technical Support

If you can't resolve your issue with the information available on our website or in this guide and would like to contact Technical Support through our website, please be sure to include at least the following information:

- ▶ The manufacturer and model and firmware revision of the VPN gateway
- ▶ A Technical Support Report from VPN Tracker (Help > Generate Technical Support Report)
- ▶ Screenshots of what you have configured on your VPN gateway, in particular all VPN settings
- ▶ A detailed description of the problem and the troubleshooting steps you have taken

VPN Settings Explained

This section explains the various settings found on your NETGEAR, and how they relate to VPN Tracker's settings. We will first go through the IKE policy settings from top to bottom, then through the VPN policy settings. In the end, a few selected VPN Tracker settings that have no matching setting on the NETGEAR, or are found elsewhere, are explained.

IKE Policy

The IKE Policy contains the settings for the first phase in the process of establishing a VPN connection. **Many of the settings here correspond to settings located in VPN Tracker on the Basic tab, or under Advanced > Phase 1.**

General

General	
Policy Name	<input type="text" value="vpntracker"/>
Direction/Type	<input type="button" value="Responder"/>
Exchange Mode	<input type="button" value="Aggressive Mode"/>

Policy Name: The policy name is used only for naming connections on the device. Use a name that you will recognize later.

Direction / Type: Must be "**Remote Access**" or "**Responder**" for VPN clients to be able to connect.

Exchange Mode: Always use "**Aggressive**" Mode if VPN clients connect from dynamic IP addresses. The Exchange Mode configured here must match the Advanced > Exchange Mode setting in VPN Tracker. If you must for some reason use Main Mode here, please refer to your device's documentation for any prerequisites for using Main Mode.

Local and Remote Identifier

Local	
Local Identity Type	Fully Qualified Domain Name
Local Identity Data	netgear.local
<hr/>	
Remote	
Remote Identity Type	Fully Qualified Domain Name
Remote Identity Data	vpntracker.local

Local Identity Type: The local identity's type on the device must match the **Remote Identifier Type** (Basic > Identifiers) in VPN Tracker.

Local Identity Data: The local identity data on the device must match the **Remote Identifier** (Basic > Identifiers) in VPN Tracker.

Remote Identity Type: The remote identity's type on the device must match the **Local Identifier Type** (Basic > Identifiers) in VPN Tracker.

Remote Identity Data: The remote identity data on the device must match the **Local Identifier** (Basic > Identifiers) in VPN Tracker.

IKE SA Parameters

IKE SA Parameters	
Encryption Algorithm	3DES
Authentication Algorithm	SHA-1
Authentication Method	<input checked="" type="radio"/> Pre-shared Key <input type="radio"/> RSA Signature (requires Certificate)
Diffie-Hellman (DH) Group	Group 2 (1024 Bit)
SA Life Time	86400 (secs)

Note While it is possible to set more than one encryption algorithm in VPN Tracker (as long as the one actually used by the device is among them), setting more than two or three algorithms (or algorithms not known to the device) may cause the connection to fail.

Encryption Algorithm: The encryption algorithm must match the encryption algorithm configured in VPN Tracker in Advanced > Phase 1 > Encryption Algorithms. The device uses 3DES by default, which is generally a good choice. AES-128/192/256 are considered to be even more secure (AES-192/AES-256 are only available in the Professional Edition of VPN Tracker).

Authentication Algorithm: The authentication algorithm must match the hash algorithm configured in VPN Tracker (Advanced > Phase 1 > Hash Algorithms). Do not select more hash algorithms in VPN Tracker than the one selected on the device.

Authentication Method: Unless you already have a Public-Key Infrastructure (PKI) in place for your users, you will probably want to start out using pre-shared key (i.e. password-based) authentication. The method must match Basic > Authentication in VPN Tracker.

Pre-shared key: This is the password for the VPN connection, and corresponds to the same setting in VPN Tracker (Basic > Authentication). This password is

shared among all users. Make sure to choose a strong password here that is long enough and contains a mix of letters and numbers (but be aware that your Mac and your NETGEAR may not use the same character encoding, so try to avoid accented characters).


Diffie-Hellman (DH) Group: The Diffie-Hellman (DH) group defined here must match the group selected for phase 1 in VPN Tracker (Advanced > Phase 1 > Diffie-Hellman). Using a longer key (= higher number) is more secure, but may also be slower.

SA Life Time: The IKE SA lifetime indicates when the phase 1 of the connection needs to be re-established. The lifetime must match the lifetime for phase 1 in VPN Tracker (Advanced > Phase 1 > Lifetime). A value of 86400 sec (24 hours) is generally a good choice. It is not recommended to set the lifetime lower than 3600 sec (1 hour).

VPN Policy

The VPN Policy contains the settings for the second phase in the process of establishing a VPN connection. **Many of the settings here correspond to settings located in VPN Tracker in the Network section of the Basic tab, or in Advanced > Phase 2.**

General

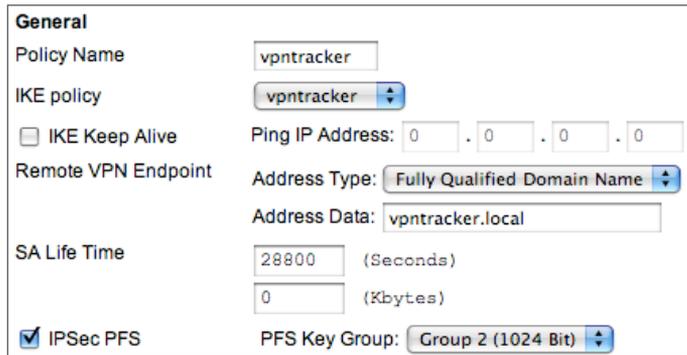

The screenshot shows the 'General' tab of a VPN Policy configuration window. The settings are as follows:

- Policy Name:** vpntracker
- IKE policy:** vpntracker
- IKE Keep Alive:** Ping IP Address: 0 . 0 . 0 . 0
- Remote VPN Endpoint:** Address Type: Fully Qualified Domain Name; Address Data: vpntracker.local
- SA Life Time:** 28800 (Seconds); 0 (Kbytes)
- IPSec PFS:** PFS Key Group: Group 2 (1024 Bit)

Policy Name: The policy name is used only for naming connections on the device. Use a name that you will recognize later.

IKE Policy: Select the corresponding IKE policy. An IKE policy that is not selected in any VPN policy cannot be accessed. However, selecting an IKE policy here does not automatically mean that connections from the selected IKE policy will use this VPN policy, the VPN policy lookup on this device is independent from the IKE policy and determined by the traffic selectors.

IKE Keep Alive: This setting is relevant for VPN connections established between the NETGEAR and another gateway. For client connections such as VPN Tracker, it should be left disabled.

Remote VPN Endpoint: This is the (public) IP address of the connecting client. With clients connecting from different IP addresses, it should be set to "Fully Qualified Domain Name". Enter the same Fully Qualified Domain Name (FQDN) that is used for the "Remote Identity Data" in the IKE Policy.

SA Life Time: The lifetime determines how long a client can be connected before the encryption keys must be renegotiated. The lifetime must match the lifetime for phase 2 in VPN Tracker (Advanced > Phase 2 > Lifetime). A value of 28800 sec (8 hours) is generally a good choice. It is not recommended to set the lifetime lower than 3600 sec (1 hour). Due to the complications involved with a lifetime that depends on data transfer amounts, we recommend setting the lifetime in “Seconds” only, and setting the “Kbytes” field to 0.

IPsec PFS: The setting must match the Perfect Forward Secrecy (PFS) setting in VPN Tracker (Advanced > Phase 2 > Perfect Forward Secrecy (PFS)). Using PFS is more secure.

IPsec PFS Key Group: The PFS key group must match the PFS Diffie-Hellman (DH) group in VPN Tracker (Advanced > Phase 2 > Perfect Forward Secrecy (PFS)). Using a longer key (= higher number) is more secure, but may also be slower.

Traffic Selector

Local IP	Subnet address ▾
	Start IP address: 192 . 168 . 13 . 0
	Finish IP address: 0 . 0 . 0 . 0
	Subnet Mask: 255 . 255 . 255 . 0
Remote IP	Any ▾
	Start IP address: 0 . 0 . 0 . 0
	Finish IP address: 0 . 0 . 0 . 0
	Subnet Mask: 0 . 0 . 0 . 0

The Traffic Selection settings determine the endpoints of the VPN tunnel.

►The **local** (=NETGEAR) side of the tunnel should be configured to be a subnet matching the NETGEAR's LAN (192.168.13.0/255.255.255.0 is the NETGEAR's LAN in our example)

►The **remote** part should be set to “Any” in most cases.

Advanced Users

If you are not setting the remote part of the Traffic Selection to “Any” (for example, because you have different VPN policies all used by clients connecting from dynamic IP addresses), it must match exactly what is configured in VPN Tracker as the Local Address (or Local Network, if using a Network to Network connection). Range type addresses are not supported in VPN Tracker.

AH Configuration

AH Configuration
 Enable Authentication Authentication Algorithm: SHA-1

Enable Authentication: VPN Tracker uses Encapsulating Security Payload (ESP) with authentication. Using Authentication Header (AH) is not necessary and not supported. It should be turned off.

ESP Configuration

ESP Configuration
 Enable Encryption Encryption Algorithm: 3DES
 Enable Authentication Authentication Algorithm: SHA-1

Enable Encryption: This setting ensures that data transferred through the VPN tunnel is encrypted. It should always be turned on, and must match the corresponding setting in VPN Tracker (Advanced > Phase 2 > Encryption Algorithms).

The device uses 3DES by default, which is generally a good choice. AES-128/192/256 are considered to be even more secure (AES-192/AES-256 are only available in the Professional Edition of VPN Tracker).

Note While it is possible to set more than one encryption algorithm in VPN Tracker (as long as the one used by the device is among them), setting more than two or three algorithms (or algorithms not known to the device) may cause the connection to fail

Enable Authentication: This setting ensures that data sent through the VPN tunnel is authenticated. It should always be turned on, and must match the corresponding setting in VPN Tracker (Advanced > Phase 2 > Authentication Algorithms). Do not select more authentication algorithms in VPN Tracker than the one selected on the device. NETGEAR uses SHA-1 by default (which corresponds to HMAC SHA-1 in VPN Tracker, MD5 on the NETGEAR corresponds to HMAC MD5 in VPN Tracker).

NETBIOS

NETBIOS Enable

NETBIOS Enable: This setting has no effect on the VPN Tracker configuration.

The Role of the Local Address in VPN Tracker

The local address is the IP address that your Mac uses in the remote network when connected through VPN. If the Local Address field is left empty, the Mac's actual local IP address (as shown in System Preferences > Network) is used

Advanced Users The Local Address is used as the endpoint of the IPsec Security Association (SA) on the VPN Tracker side that is established in phase 2 of the connection process.

When to Set the Local Address in VPN Tracker

Setting a (suitably chosen) fixed Local Address is always a good idea. You **must** use a fixed Local Address in VPN Tracker if

- ▶ multiple clients (users/computers) use the VPN
- ▶ the NETGEAR device is not the default gateway (router) in the remote network

Choosing the Local Address

When connecting to a NETGEAR device, the Local Address must **not** be part of the remote network (i.e. the NETGEAR's LAN) and the **same Local Address may not be used by two VPN clients** at the same time. If there is only a single user of the VPN, this will often automatically be the case if the Local Address field is simply left empty, and VPN Tracker therefore uses the Macs local IP address. However, in all other circumstances, you should configure a specific address.

Example: The NETGEAR's LAN in this example is the network 192.168.13.0/24 (= 192.168.13.0/255.255.255.0). Choose an arbitrary [private network](#) that is not part of this network, such as 10.22.13.0/24, and manually assign each user of the VPN a different IP address from that network to be used as the Local Address in VPN Tracker.

User	IP Address
alice	10.22.13.1
bob	10.22.13.2
charlie	10.22.13.3
...	10.22.13._

Tip If your VPN needs expand to more than a handful of users, you may want to consider upgrading to a VPN gateway that can automatically distribute IP addresses through Mode Config.

Local Addresses for the More Curious

Why can't I use a Local Address from my NETGEAR's LAN?

It may sound a bit unusual to use IP addresses that are not part of the NETGEAR's LAN. The reason for this is that the NETGEAR cannot act as a so-called "ARP Proxy" for its VPN clients. Computers on the NETGEAR's LAN therefore must be "tricked" into sending replies for VPN clients to the NETGEAR by using IPs from outside the local network (for which replies are sent to the default gateway).

My users connect from different places, from different IPs. Why do I still need to give them different Local Addresses?

In most cases, the connecting Macs will be behind routers (DSL routers, wireless access points, ...) that perform Network Address Translation (NAT), meaning they map several [private IP addresses](#) onto a single public IP address. The Macs themselves will have such a private IP address for their Ethernet or AirPort interface, and this is the IP address that is used by VPN Tracker if the Local Address field is empty.

Because of this, the likelihood of two Macs using the same local address is very high: Many NAT routers are by default configured to use the same private networks (192.168.1.0/24 and 10.0.0.0/24 are popular choices), and therefore there is a good chance that two clients connecting from entirely different places will have the same local IP address assigned by their respective local router. Therefore it is essential to configure a different Local Address in VPN Tracker for each VPN user if multiple users connect concurrently.

Why do I have to set a fixed Local Address when my NETGEAR is not the default gateway (router) in its LAN?

If the NETGEAR is not the default gateway, this means that computers the VPN clients communicate with do not connect to the Internet through the NETGEAR.

In such an environment, you will have to ensure that those computers (and all other resources accessed through the VPN, such as printers and NAS drives) know where to send replies for VPN clients. This is much easier, if you know what IP addresses your VPN clients will be using, and therefore you should enter an individual fixed IP address in the Local Address field on each VPN client.

Once you have decided on a range of IP address to be used for VPN clients, you can either

- ▶ set a route to the NETGEAR for the VPN clients' IP addresses on each host that needs to communicate with VPN clients, or
- ▶ have the default gateway redirect all traffic for the VPN clients' IP addresses to the NETGEAR

Outgoing Network Ports

The FVS114 requires a VPN connection originating from network port 500. This is the default network port used by VPN Tracker. However, there are some circumstances under which VPN Tracker connections will not originate from port 500, resulting in the VPN connection timing out right at the beginning of the connection process.

Outgoing Network Ports Changed by VPN Tracker

To increase compatibility with other VPN-related software (such as “Back to My Mac” in Mac OS X 10.5 Leopard), VPN Tracker has an option to use different outgoing network ports. **This option cannot be used when connecting to FVS114 gateways.**



- ▶ Go to “**VPN Tracker 6 > Preferences**”
- ▶ Make sure that your settings are as shown in the screenshot. You will have to restart VPN Tracker for any changes to take effect.

Outgoing Network Ports Changed by the Local Router

Some local routers will modify the network ports of outgoing VPN connections while performing Network Address Translation (NAT). If you suspect that this is happening with your local (!) router, you should try the VPN connection from an Internet connection where you are not “behind” a NAT router, i.e. your Mac has a public IP address (instead of a [private IP address](#)).

You will likely receive a public IP address directly from your ISP if:

- ▶ Your Mac is connected directly to a DSL modem using PPOE
- ▶ Your Mac is connected directly to a modem using PPP
- ▶ Your Mac is connected directly to a cable modem

Tip You may be able to influence your local router’s NAT behavior by setting a port forwarding of port 500 on your router to port 500 on your Mac. Please note that the port forwarding itself is not necessary for VPN Tracker to work, but it may cause your router to preserve outgoing port numbers for your Mac and port 500, which is exactly what you want to achieve here.